

metaSETZ TL-2-C

Tally Light




The metaSETZ TL-2 tally light can be used directly with any metaSETZ Tally Controller including the TLC-4, TLC-8 and TLC-U.

The TL-2 provides two status indicators for the camera operator (green when the camera is on preview, red when on program) plus an ultra-bright LED tally for the on-camera talent. The talent tally can be disabled via a jumper (TLC-U or TLC8D controller) or software (TLC-4S or LS, and TLC-8S or LS controller).

When used with the TLC-8D controller or the TLC-U controller with some switchers only the red program and ultra-bright talent tally will illuminate.

Camera Mounting

The Shoe Mount Bracket can be mounted on either end of the TL-2 or reversed to accommodate various camera mounting configurations. The short Ethernet cable and coupler included with our TL-2 can be attached to your camera with a strap or cable tie and used as a strain relief.

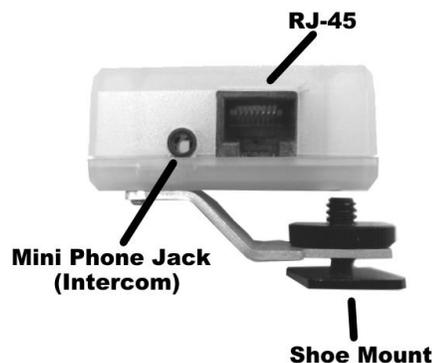


The TL-2 connects to your TLC tally controller via standard Ethernet style cable with RJ-45 connectors.

Important: The TL-2 is not an Ethernet device it just uses the same type wiring because it is commonly available but *Do not* connect the TL-2 into an Ethernet network as damage to the TL-2 or other equipment may occur.

There are no current limiting resistors in the light so if you attempt to drive the TL-2 from something other than a metaSETZ TLC controller you will need to ensure that that device has current limiting resistors or you will burn out the LEDs.

RJ45 Input Wiring Diagram

Use standard straight through Ethernet cable. We've tested cables up to 1000 feet (304 M)

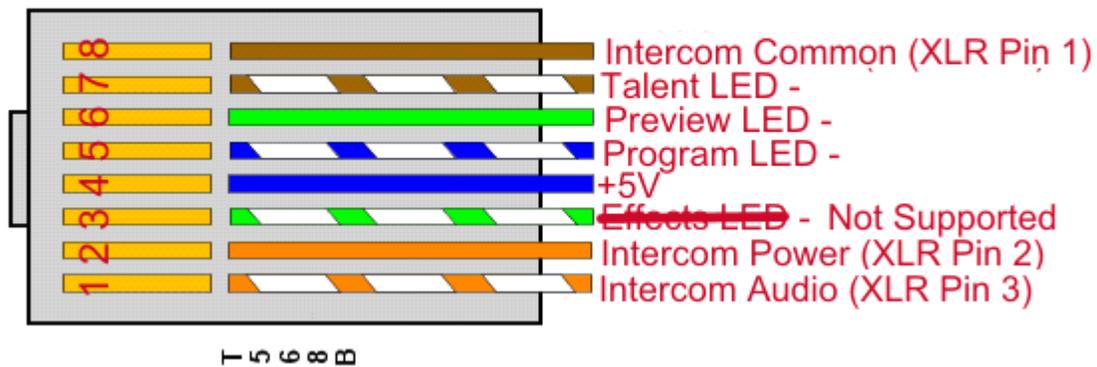

1/8" (3.5mm) Intercom Wiring Diagram

You can adapt the mini phone jack back to XLR for your intercom belt packs. Because the Ethernet cable is unshielded you may pick up some noise in your intercom with longer cable runs.

For more details on using the Intercom pass through please see the TLC manual.

Off the shelf cables *will* be wired incorrectly as they are designed to connect a balanced microphone to the unbalanced input on a computer sound card. The correct cables are available from your metaSETZ dealer.





1-800-692-6442 (toll free) or 1-812-330-0124 (outside US)

PO Box 5206
Bloomington IN, 47407
A Digital Arts Company